



**Installation Instructions**  
**Front Bolt-On/Rugged Look Fender Flares**  
**Ford F150 (15-On) FF837**

**Important: Please read instructions entirely before installing this product.**

Hardware Included	QTY
Extrusion	28.5 ft
Alcohol wipe	4

Hardware Included	QTY
Retaining Clip	4
"U" Style Clip	12

Bolt Kit Included (Bolt-On look flare only)	QTY
Nuts	42
Allen Key Bolts	42

Ensure that both left and right hand front Fender Flares suit the profile of the vehicle. Note the areas where the Fender Flares come in contact with the vehicle. NOTE: Before fitting Fender Flares remove any moldings, strips or existing flares from the wheel arch. If there is a body side molding, mark where the molding is to be cut, alternatively the Fender Flare can be cut to go around the molding. Be sure to allow enough room for the extrusion. **No drilling of vehicle is required for Bolt-On Look Fender Flares. This is a non-drill product.**

**FRONT FENDER FLARE INSTALLATION**



**STEP 1:** Clean the body areas where the Fender Flares will make contact with a clean cloth.



**STEP 2:** Locate three (3) 5.5mm bolts and two (2) 7mm bolt. For models equipped with factory fender flares, removal of factory flares are required, please consult the vehicle service manual for factory fender flare removal.

For Technical Support/Warranty Information please call 800-757-7075  
 EGR Inc., 4000 East Greystone Drive, Ontario, CA 91761



## Installation Instructions

Front Bolt-On/Rugged Look Fender Flares  
Ford F150 (15-On) FF837



**STEP 3:** Place the Fender Flare onto the vehicle and fit into the correct position following the contours of the body. Use four (4) of the .6mm clips (two (2) per side) to secure the Fender Flare to the body. Make sure the dimple in the clip securely attaches in the slot on the Fender Flare.



**STEP 4:** Insert four (4) of the .9mm lever retaining clips (two (2) per side) into the Fender Flare. Make sure the tab in the clip securely attaches in the slot on the Fender Flare. Secure with five (5) bolts removed in Step 6.



**STEP 5:** Reinstall the remaining 5.5mm bolt and two 7mm bolts.



**STEP 6:** Repeat installation method for other side. Double check the front Fender Flares to make sure all bolts are tight and clips are securely fastened. Your installation is now complete. Do not use abrasive cleaners.

For Technical Support/Warranty Information please call 800-757-7075  
EGR Inc., 4000 East Greystone Drive, Ontario, CA 91761




**Installation Instructions**  
Front Bolt-On/Rugged Look Fender Flares  
Ford F150 (15-On) **FF837**

**REAR FENDER FLARE INSTALLATION**



**STEP 5:** Clean the body areas where the Fender Flares will make contact with a clean cloth.

For models equipped with factory fender flares, removal of factory flares is required, please consult the vehicle service manual for factory fender flare removal.

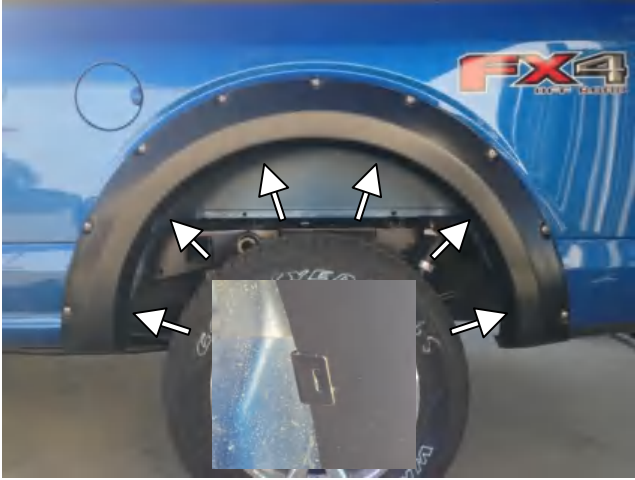

**STEP 6:** Place the Fender Flare onto the vehicle and fit into the correct position following the contours of the body. Use 6 of the U-style clips to secure the Fender Flare to the body. Make sure the barb in the clip securely attaches in the slot on the Fender Flare.



**STEP 7:** Repeat installation method for other side. Double check the front Fender Flares to make sure all bolts are tight and clips are securely fastened. Your installation is now complete. Do not use abrasive cleaners.

**For Technical Support/Warranty Information please call 800-757-7075**  
**EGR Inc., 4000 East Greystone Drive, Ontario, CA 91761**