


## 94-02 Dodge 1500-3500 Front Bumper Replacement

### Installation Instructions. Part # 300-49-8005

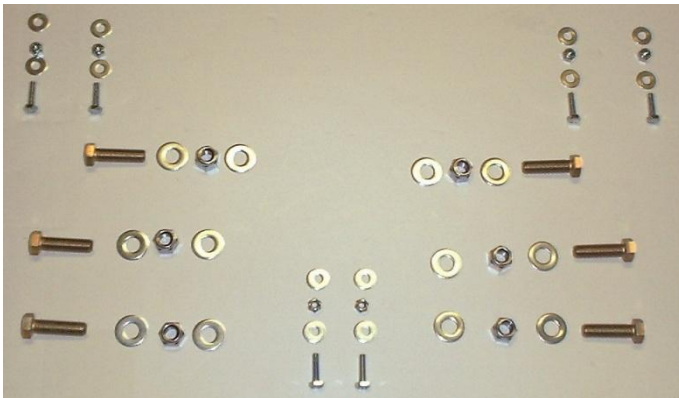

Bolt Bag

**Bolt Bag Contents:**

Quantity	Description
6	1/2" X 1-3/4" bolts
12	1/2" flat washers
6	1/2" Lock Washer
6	1/2" Hex Nuts
6	1/4" X 1" bolts
6	1/4" nuts
6	1/4" lock washers
12	1/4" flat washers
60	Total Pieces

**Step 1:** Remove factory chrome bumper from vehicle .

**Step 2:** Remove factory fog lights from chrome bumper and Install to Frontier front bumper replacements using 1/4 " bolts provided. Note: It is easier to install the fog lights (if available) prior to mounting the complete front bumper replacement.

**Step 3:** Mount front bumper replacement (not shown) to frame. Front bumper replacement bracket aligns to the inside of the vehicle frame rails (see picture).



Front Bumper Replacement Bracket



Driver Side Frame



**Step 4:** Check alignment of front bumper replacement to truck and tighten all bolts.